




Perform all wiring with the high voltage equipment powered off

WIRING SCHEMATIC

Restraint Model	Revision	Special Requirements
Pentalift HFR32	JG 12-12-19	AC Signal Converter Premium

Restraint Configuration	LED Controller Configuration
N/A	AC Converter DIP switches → All AC Software: Profile Mode 3 See manual programming document for instructions

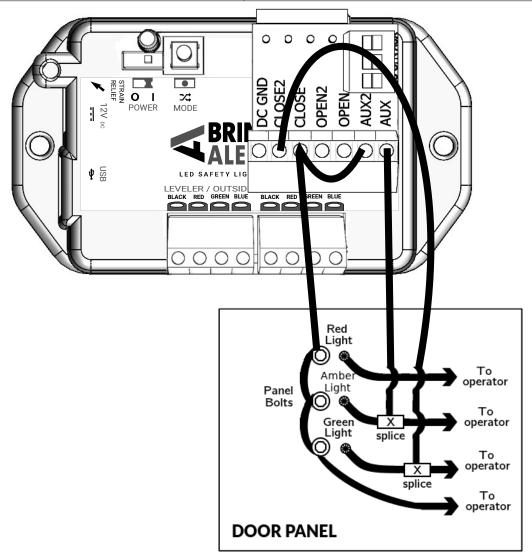

Page 1 of 1 PROPRIETARY & CONFIDENTIAL DOCUMENT Questions 786.339.9840