



Perform all wiring with  
the high voltage  
equipment powered off

## WIRING SCHEMATIC

Operator Model	Revision	Special Requirements
Liftmaster L2	RP 3-9-20	AC Signal Converter 4 - Basic

Operator Configuration	LED Controller Configuration
N/A	AC Converter DIP switches → All AC Software: Enable AC Converter Software: Invert Signal Aux <i>See manual programming document for instructions</i>

