

MANUAL PROGRAMMING

Restraint Model	Doc. Rev.	CRC Code	Firmware
Liftmaster HT-2211 & HT-2311	RP 6-17-20		DSK-180606

Select the Profile Mode


Power on the LED Controller. Look at the amber status LED near the mode button. Hold the mode button down for about 3 seconds to cycle through the modes. Please select Mode 1 as indicated below.

Custom Profile Mode		Slowly fading in and out
Profile Mode 1, Factory Reset	✓	Steady Light
Profile Mode 2		Flashing about once per second
Profile Mode 3		Rapid flashing

Getting Ready

You will be required to remove the AC signal converter prior to doing any additional configuration. Ensure that no wires are attached to the LED controller other than the DC power cable. Turn the power switch off.

Configuration – Enable AC Signal Converter

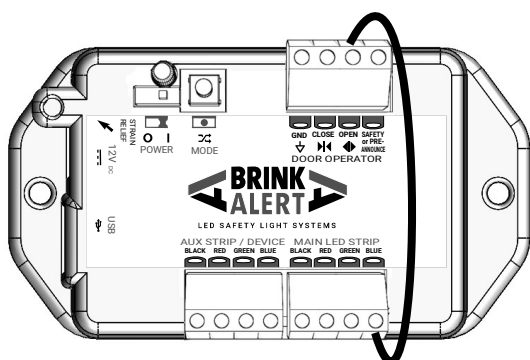

- Insert jumper as shown to the left. You may also use jumpers with alligator clips.
- Hold the Mode button down and, while keeping it held down, set the power switch to the ON position. Let go of the Mode button. The amber status LED will rapidly blink and then turn off.
- Turn the power switch off.
- Remove the jumper wires.

Finishing Up

You may now reinstall the AC signal converter and reconnect the live wires as shown in the provided schematic.