



## MANUAL PROGRAMMING

| Restraint Model  | Doc. Rev.   | CRC Code | Firmware   |
|------------------|-------------|----------|------------|
| Nova Lock & Load | JG 12-12-19 | N/A      | TRK-190729 |

### Select the Profile Mode

Power on the LED Controller. Look at the amber status LED near the mode button. Hold the mode button down for about 3 seconds to cycle through the modes. Please select Mode 2 as indicated below.

|                               |   |                                |
|-------------------------------|---|--------------------------------|
| Custom Profile Mode           |   | Slowly fading in and out       |
| Profile Mode 1, Factory Reset |   | Steady Light                   |
| Profile Mode 2                | ✓ | Flashing about once per second |
| Profile Mode 3                |   | Rapid flashing                 |

### Finishing Up

Turn the power switch off. You may now reinstall the AC signal converter and reconnect the live wires as shown in the provided schematic.