



MANUAL PROGRAMMING

Restraint Model	Doc. Rev.	CRC Code	Firmware
Serco Entrematic (w/o amber light)	JG 12-12-19	N/A	TRK-190729

Select the Profile Mode

Power on the LED Controller. Look at the amber status LED near the mode button. Hold the mode button down for about 3 seconds to cycle through the modes. Please select Mode 2 as indicated below.

Custom Profile Mode		Slowly fading in and out
Profile Mode 1, Factory Reset		Steady Light
Profile Mode 2	✓	Flashing about once per second
Profile Mode 3		Rapid flashing

Finishing Up

Turn the power switch off. You may now reinstall the AC signal converter and reconnect the live wires as shown in the provided schematic.